

OEL Recommended Spare Parts List

B411





Revision 14

NOTE: B411/B431/ES4131 MODELS ONLY

Please check the power switch on the side of your printer to determine if you have a standard or L6 model:

The power switch colour will either be light grey/white or dark grey/black depending on the model:

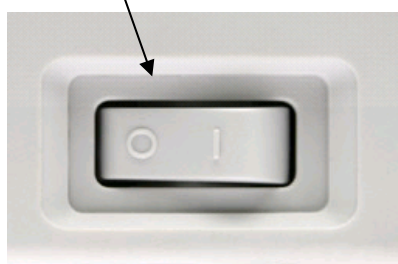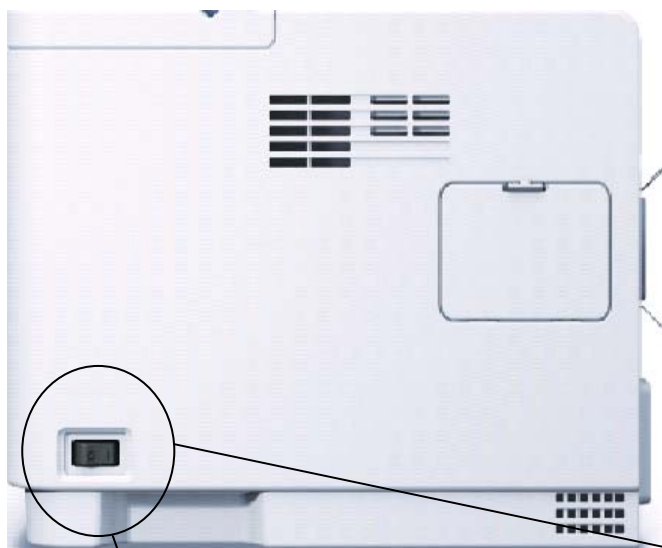


B411/B431/ES4131 (standard model)



B411/B431/ES4131 (L6 model)

Alternately you can check the serial label or rating label, For example:

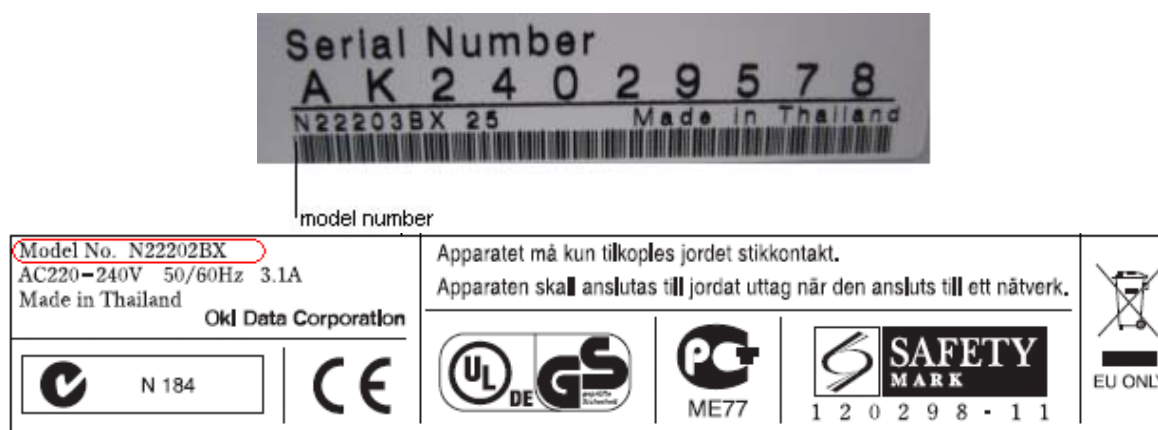

B411/B431/ES4131 (standard model)

Ends with B

B411dn/B411d - **N22201B / N22200B**

B431dn/431d - **N22203B / N22202B**

B411/B431/ES4131 (L6 model)

Ends with BX

B411dnLot6/401dnLot6 - **N22201BX**

B411dLot6/B401dLot6 - **N22200BX**

B431dnLot6/B431dLot6 - **N22203BX / N22202BX**

Please refer to the following RSPLs depending on your model:

Standard Model

B411 RSPL

B431 RSPL

L6 Model

B401/B411/B431L6 RSPL

Rev	Unit Name	No.	Part No.	Part Name	Q'ty /Unit	Recommended Q'ty/Year			Remarks	Special	Del/ Add	Remarks for environment
						per	per	per				
						500	1000	2000				
11	Printer Unit	1-a	44559001	Cassette-Assy (250sht)	1	1	2	4				
11	Printer Unit	2	44384701	Frame Assy.-Retard	1	1	2	4				
11	Printer Unit	3	43963101	Spring-Retard	1	1	2	4				
11	Printer Unit	4	44563401	Plate-Assy-Side-L	1	1	2	4				
11	Printer Unit	5-a	44563501	Plate-Assy-Side-R	1	1	2	4	B411			
11	Printer Unit	6	44563701	Duplex-Assy	1	1	2	4				
11	Printer Unit	7	44561501	Front-Assy. -PN296	1	1	2	4	B411			
11	Printer Unit	8	44559301	Frame-Assy-TR	1	1	2	4				
11	Printer Unit	9-c	44565806	Fuser-Assy-PN297 (230V)	1	5	10	20	220V-240V			
11	Printer Unit	10	44563801	Guide-Assy-Eject-L	1	1	2	4				
11	Printer Unit	11-a	44563901	Frame-Assy-Rear	1	1	2	4				
11	Printer Unit	12-a	44564201	Frame-Assy-Manual-PN296	1	1	2	4	B411			
11	Printer Unit	13-a	44564601	Cover-Assy-Manual-PN296	1	1	2	4	B411			
11	Printer Unit	14-a	44564901	Cover-Assy-Stacker-PN296	1	1	2	4	B411			
11	Printer Unit	15-b	44560102	Cover-Assy-OPE (PN296-EURO)	1	1	2	4	B411 OEL			
11	Printer Unit	16	44509801	Spring-Contact	5	5	10	20				
11	Printer Unit	17	44554001	OR-Board -97H	1	1	2	4				
11	Printer Unit	18	44557601	Cable-FFC-28P (Add)	1	1	2	4				
11	Printer Unit	19	44261402	Clutch	1	1	2	4	Hopping-Clutch			
11	Printer Unit	20	44261405	Clutch-4.5	1	1	2	4	Regist-Clutch			
11	Printer Unit	21	44557101	Motor-Fan	1	1	2	4				
11	Printer Unit	22	44558301	Motor-DC (Main)	1	1	2	4				
11	Printer Unit	23	44767401	Clamp-Cable	11	4	8	16				
11	Printer Unit	24	44560801	CONN Cord-JST11P-JST11P	1	1	2	4				
11	Printer Unit	25	44557102	Motor-Fan	1	1	2	4				
11	Printer Unit	26-b	44655910	Maintenance board 97M-3 for OEL	1	1	2	4	B411dn Maintenance-Board (For OEL)			
11	Printer Unit	26-f	44655914	Maintenance board 97M-4 for OEL	1	1	2	4	B411d Maintenance-Board (For OEL)			
11	Printer Unit	27-b	44342302	PWR unit-ACDC Switch	1	1	2	4	220V-240V			
12	Printer Unit	28-a	44464901	Cover-Eject	1	1	2	4				
	Plate-Assy-Side-L	1	44473601	Lever-Sensor-Cassette	1	1	2	4				
	Plate-Assy-Side-L	2	44361501	Spring-Sensor-016	1	1	2	4				
	Plate-Assy-Side-L	3	44567701	CONN Cord-JST3P-TAG	1	1	2	4				
3	Plate-Assy-Side-L	4	43289101	OR-Motor-FAN (80)	1	1	2	4				
	Plate-Assy-Side-R	1	44519301	Motor-Pulse	1	1	2	4				
	Plate-Assy-Side-R	2	2233013P0080	9715B-08Z02-G4C	1	1	2	4				
	Plate-Assy-Side-R	3	44430402	CONN Cord-AMP8P-AMP8P	1	1	2	4				
	Plate-Assy-Side-R	4	44555101	OR-Board-97T	1	1	2	4				
	Plate-Assy-Side-R	5	44561001	CONN Cord-AMP4P-AMP3P	1	1	2	4				
	Plate-Assy-Side-R	6	44567501	CONN Cord-AMP3P-SW	1	1	2	4				
	Plate-Assy-Side-R	7	6520028M0001	GP1A173LCS2F	1	1	2	4				
	Plate-Assy-Side-R	8	44560901	CONN Cord-AMP3P-JST3P	1	1	2	4				
	Duplex-Assy	1	44354101	Roller-Feed_Dup	2	2	4	8				

Rev	Unit Name	No.	Part No.	Part Name	Q'ty /Unit	Recommended Q'ty/Year			Remarks	Special	Del/ Add	Remarks for environment
						per	per	per				
						500	1000	2000				
	Duplex-Assy	2	44379301	Bearing-Dup	4	4	8	16				
	Duplex-Assy	3	42060701	Bush	2	2	4	8				
7	Duplex-Assy	4	RE4-SK	Ring	1	1	2	4				
	Front-Assy	1	44357501	Bearing-Feed-L	1	1	2	4				
	Front-Assy	2	44422901	Bearing-Feed-R	1	1	2	4				
	Front-Assy	3	44362101	Shaft-Roller-Feed	2	2	4	8				
	Front-Assy	4	44135601	Roller-Feed	2	2	4	8				
	Front-Assy	5	44357601	Bush-Feed	2	2	4	8				
	Front-Assy	6	6520028M0001	GP1A173LCS2F	1	1	2	4				
	Front-Assy	7	44569701	CONN Cord-AMP3P-AMP3P	1	1	2	4				
	Front-Assy	8	44549801	Lever-End	1	1	2	4				
	Front-Assy	9	44549901	Lever-End-Sub	1	1	2	4				
	Front-Assy	10	44550001	Spring-Lever-End	1	1	2	4				
	Front-Assy	11	43526601	Bush	1	1	2	4				
	Front-Assy	12	NK2-10-SUS	KNOCK PIN	1	1	2	4				
	Front-Assy	13	RE4-SK	Ring	2	2	4	8				
	Front-Assy	14	44483301	Roller-Assy-Hopping	1	1	2	4				
	Front-Assy	15	44483601	Roller-Assy-PickUp	1	1	2	4				
	Front-Assy	16	43355101	Roller-Pinch	1	1	2	4				
	Front-Assy	17	6520028M0001	GP1A173LCS2F	2	1	2	4				
	Front-Assy	18	44361301	Lever-Sensor-IN	1	1	2	4				
	Front-Assy	19	44361401	Lever-Sensor-WR	1	1	2	4				
	Front-Assy	20	44361501	Spring-Sensor-016	2	1	2	4				
	Front-Assy	21	44361602	Roller-Regist	1	1	2	4				
	Front-Assy	22	42796901	OR-RES-High-Voltage-Z	1	1	2	4				
	Front-Assy	23	RE5-SK	Ring	1	1	2	4				
	Frame-Assy-TR	1	43355101	Roller-Pinch	2	2	4	8				
	Frame-Assy-TR	2	43330101	Bearing-TR	2	2	4	8				
	Frame-Assy-TR	3	44432101	Roller-Transfer	1	1	2	4				
	Guide-Eject-Lower-Assy	1	6520028M0001	GP1A173LCS2F	1	1	2	4				
	Guide-Eject-Lower-Assy	2	44569301	CONN Cord-JST3P-AMP3P	1	1	2	4				
	Guide-Eject-Lower-Assy	3	44365701	Lever-Sensor_Exit	1	1	2	4				
	Guide-Eject-Lower-Assy	4	44365901	Spring-Sensor_Exit	1	1	2	4				
	Frame-Rear-Assy	1	44364301	Shaft-Assy.-Eject	2	2	4	8				
	Frame-Rear-Assy	2	2071152P0001	D2X-C	1	1	2	4				
	Frame-Rear-Assy	3	44569601	CONN Cord-AMP2P-AMP2P	1	1	2	4				
	Manual-Assy	1	43355101	Roller-Pinch	1	1	2	4				
	Cover-Stacker-Assy	1	44570901	Cable-FFC-20P (Add)	1	1	2	4				
	Cover-Stacker-Assy	2	44317201	LED Head Unit-51TRA	1	1	2	4	600dpi			